

Thank you for choosing this Icom product. The RS-MS3W is a software application for Windows, designed for using the DV Gateway function of the Icom D-STAR® transceivers. These instructions are made based on using Windows 7.

READ ALL INSTRUCTIONS carefully and completely before using this product.

SYSTEM REQUIREMENTS

The following are required to use the RS-MS3W.

Operating system

Microsoft® Windows® 10 (32/64 bit)
Microsoft® Windows® 8.1 (32/64 bit)
Microsoft® Windows® 7 (32/64 bit)
Microsoft® Windows Vista® (32/64 bit)

USB port

A USB 1.1 or USB 2.0

NOTE: Before using this software application, you must have your call sign registered to the gateway server that has the RS-RP3C installed.

Ask the gateway repeater administrator for details.

COMPATIBLE TRANSCEIVERS AND CABLES

The following transceivers and cables are compatible with the RS-MS3W:

(As of October 2016)

Transceiver	<ul style="list-style-type: none">• ID-51A PLUS2• ID-51E PLUS2
Cable for connection	<ul style="list-style-type: none">• OPC-2350LU DATA CABLE <p>(May be supplied with the transceiver, depending on the transceiver version.)</p>

NOTE: See “About the DV Gateway function” on the Icom website for connection details.

<http://www.icom.co.jp/world/support/download/manual/>

Icom, Icom Inc. and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand, and/or other countries.

Microsoft, Windows and Windows Vista are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe, Acrobat, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

All other products or brands are registered trademarks or trademarks of their respective holders.

INSTALLATION

To install:


- Confirm Windows has completed its startup.
- Log in as the **administrator**.
- Be sure no other applications are running.

① These instructions are based on using Microsoft® Windows® 7.


1. Unzip the file downloaded from the Icom website.
(<http://www.icom.co.jp/world/support/download/firm/>)
2. Double click the executable file in the unzipped folder.
① When “User Account Control” is displayed, click <Yes> to continue.
3. Select a language, and then click <OK>.




4. Click <Next >>.

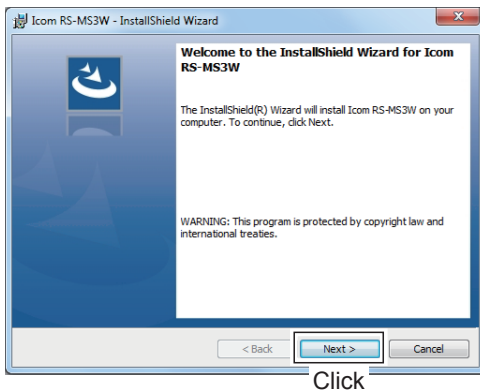


5. Click <Next >>.
① To select another destination folder, click <Change...> before clicking <Next >>.

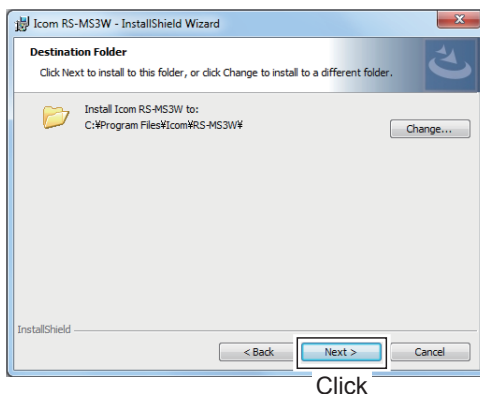

6. Click <Install>.

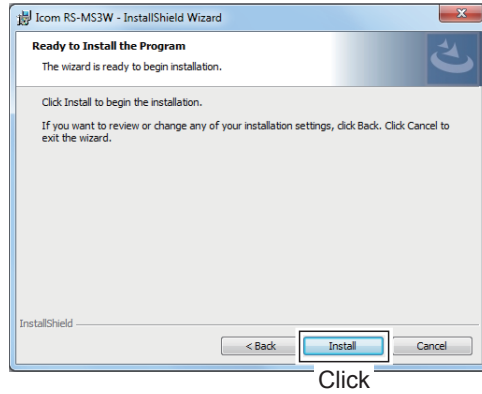

7. Click <Finish>.

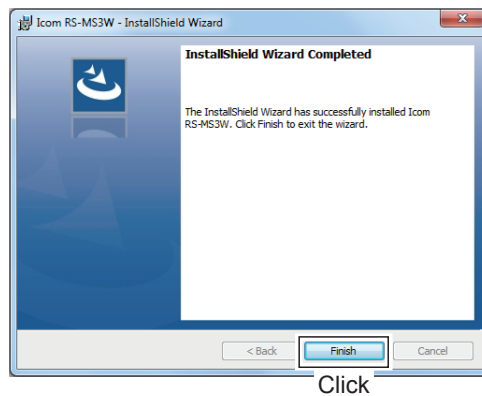


- ① The “RS-MS3W” file is created in the Windows menu, and a shortcut icon is created on the desktop.
- ① Double click the icon to open the RS-MS3W.



NOTE: To uninstall, use the “Uninstall a program” in the Windows Control Panel.

MAIN SCREEN

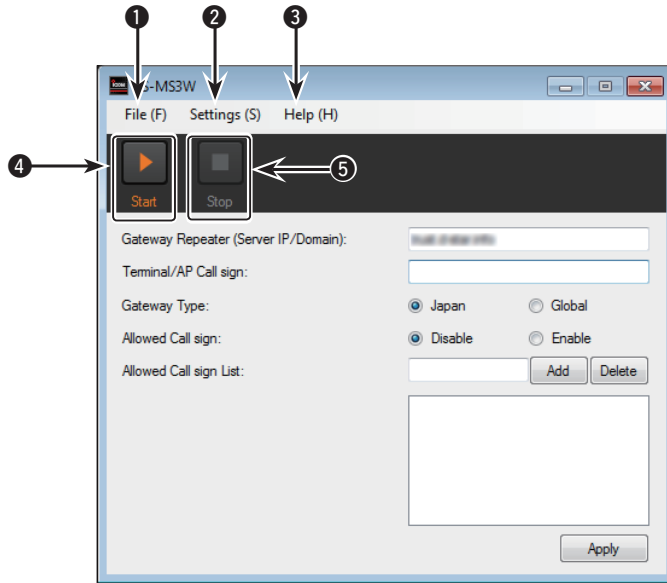

1 File

Exit(X)


Exit: Closes the application.

2 Settings

Com Port(P)

Com Port: Displays the COM port number that the data communication cable is connected to.

- ① Click “▼” to display the COM ports on a drop-down list.
- ① See the data cable’s “*Installation Guide*” on the Icom website for details on checking the COM port number.

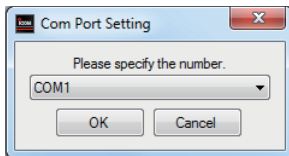


TIP: You can access the data cable’s Installation Guide by entering the cable name on the URL below.

<http://www.icom.co.jp/world/support/download/manual/>

3 Help

About(A)

About: Opens the information window and displays the version number.

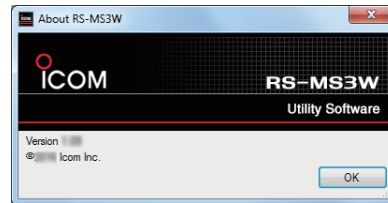


4 Start

Click to start the connection to the destination.

5 Stop

Click to stop the connection to the destination.

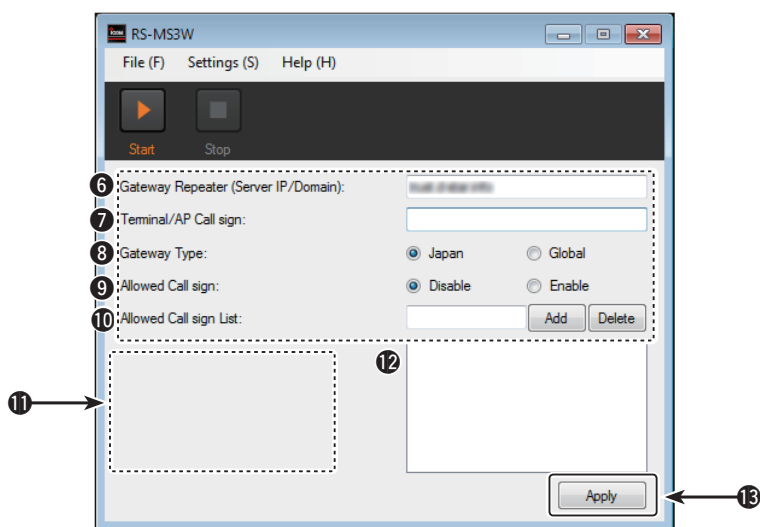

6 Gateway Repeater (Server IP/Domain)

Enter the RS-RP3C's gateway repeater address or domain name.

① The address consists of up to 64 characters.

NOTE: You must have your call sign registered to the gateway server that has the RS-RP3C installed.
Ask the gateway repeater administrator for details.

7 Terminal/AP Call sign

Enter the Terminal/AP call sign that is registered as the access point on the RS-RP3C's Personal Information screen.

① The call sign consists of 8 characters.

- Enter My Call sign of the connected transceiver.
- Enter a space for the 7th character.
- Enter a desired ID suffix between A to F for the 8th character.

① If the call sign is entered in lowercase letters, the letters are automatically changed to uppercase letters when you click <Apply>.

8 Gateway Type

Select the gateway type.

① Select "Global" when operating outside of Japan.

9 Allowed Call sign

Select to use the call sign restriction for the Access Point mode. When 'Enable' is selected, this allows the station of the assigned call sign to transmit through the Internet.

Disabled: Allow any call signs to transmit.

Enabled: Allow only the call sign displayed in 12 to transmit.

① When using the Terminal mode, select 'Disabled.'

 
10 Allowed Call sign List

Enter the call sign of the stations are allowed to transmit through the internet while "Enabled" is selected for 9 "Allowed Call sign."

① You can add up to 30 call signs.

Adding a call sign

1. Enter the call sign to allow transmitting.



2. Click <Add>.

Deleting a call sign

1. In the call sign field 12, click on the call sign to delete.


- The selected call sign is displayed in the entry field.

2. Click <Delete>.

11 Call sign information field

Displays the information of call signs that are transmitted from the PC or received from the Internet.

(Example)

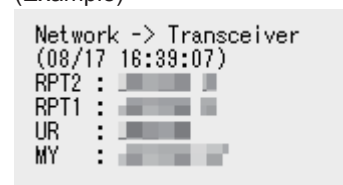

12 Call sign field

Displays the call signs that are allowed to transmit while "Enabled" is selected for 9 "Allowed Call sign."

13 Apply button

Click to save the entered data or settings.

① The button turns red when you have changed the data or settings.

① The changes are not saved until you click this button.