

DUTCH*STAR DV NODE FOR WINDOWS

Nov. 27, 2011.

WIN DV VERSION 1.3.3 – Set-up Guide Only

PROGRAM OPTIONS

CALL SIGN: VE6XXX (Blank; A;B;C)
(Enter your Call Sign, add suffix if you want)
(Suffix must be registered for Gateway access)

AUTH. CALL: VE6XXX
(Enter your Call Sign)

Call Sign Server: Dutch*Star DPNS

Call Log Size: Default 100

* Enable Logging

RF DEVICE

- DVAP
PORT: COM XX
SERIAL: HARDWARE
FREQUENCY: VHF choice for Handheld Radio

DV NODE SETTINGS

GENERAL

- Send Ack Message

LINKING

- Allow Link/Unlink Commands on RF

NOTE: Remainder of options are Blank

GATEWAY SELECTION

Example: GATEWAY: VE6WRN BAND MODULE: C

- DPLUS
- Connect as DVAP

SHOW QUICK TUNE PANEL

- Click on Gateway Button
- Enter preferred Gateways for quick access.